



.... with decisive advantages:

can be combined with BS LM 5200

BS LM 2200 BS axxent-D

LM-D

• DIN right and DIN left can be used

universally applicable module packing units

Size Range (dependant on fittings)

				Window min. max.
Sash width, second sash	(FB2)	(mm)		350 to 12501)
Sash height	(FH)	(mm)		680 to 2400
Sash height	(FH)	(mm)	only with routed-in drive gear LM, internal	725 to 2400

1) N.B.: The sash width must not exceed 1.5 times the sash height!


The details for LM Euro-groove (Pages 5 and 6) with a chamber size of 21 mm (Aluminium profiles for windows and french doors) apply to the SIEGENIA locking side. In addition to this the details given by the system manufacturer must be complied with.

If the dimensions of windows or french doors differ from this please consult SIEGENIA.

Contents

Size range	Page 1	Fitting instructions and important notes	Page 4
Fitting layout and list	Page 2	Sash dimensions	Page 5
Fitting aids, Abbreviations	Page 3	Frame dimensions	Page 6


VS LM-DS/A Fitting layout and list

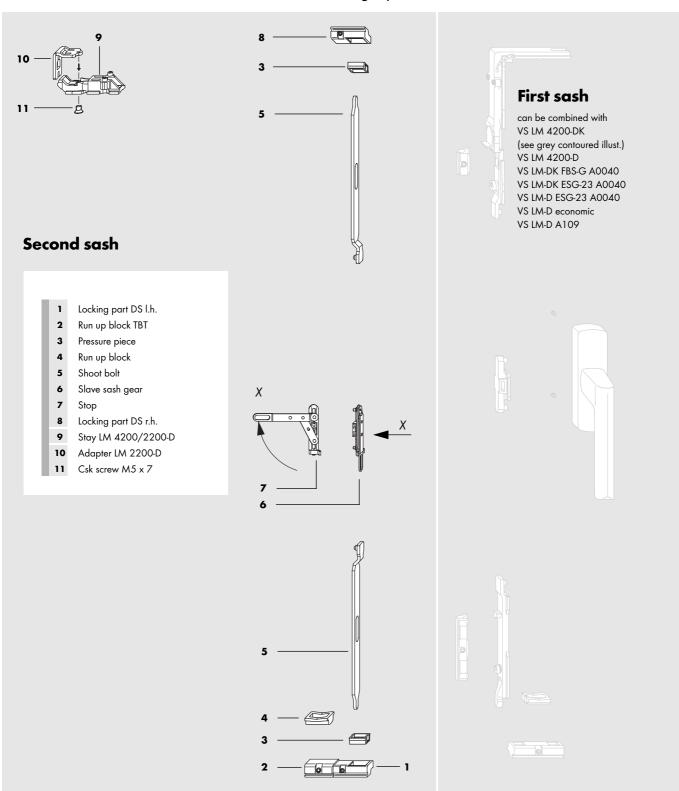


Pos.	Q	ty	Description	B	Part code	B	Part code
	A0026	A0006	bescription		i di i code		i un couc
1 – 8	1	-	VS LM-DS/A A0026	1	864425	20	252192
1-8	-	1	VS LM-DS/A A0006	1	860823	20	249321
9	1	1	Stay LM 4200/2200-D	1	MSKD0010-100010	100	MSKD0010-100060
10-11	1	1	Accessories - Turn sash stay LM 2200	1	MZBS0040-000010	20	MZBS0040-000030



VS LM-DS/A Fitting aids, Abbreviations

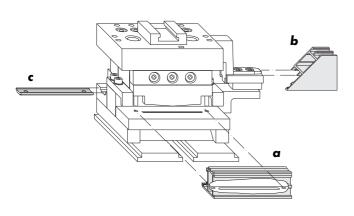

	EAN 40 12453	
Combi-tool	 a Punching out - lever b Aperture for the operating rod guide groove c Operating rod perforation and cropping 	141243
suitable punching tool: BST 105 (15 mm stroke)		139295

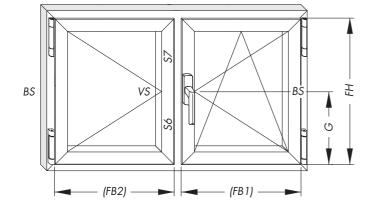

Abbreviations

The following abbreviations are used in these fitting instructions:

BS	Hinge side
FB1	Sash width, first sash
FB2	Sash width, second sash
FH	Sash height
G	Handle position
VS	Lock side
S6	Operating rod, lock side, bottom
S7	Operating rod, lock side, top

VS LM-DS/A Fitting instructions and important notes

Fitting Instructions

Preparation

- A Open the operating rod guide groove.
- **B** Machine operating rods S6 S7 in accordance with details given on Page 5.

Sash

- A Fit stop (7) DIN right or DIN left onto the slave sash gear (6).
- **B** Push in shoot bolt (5) with operating rod S6 and operating rod S7 with shoot bolt (5) vertically on the lock side.
- **C** Fit slave sash gear (**6**) onto the operating rods S6 and S7 and clamp with countersunk screw.
- **D** Fit run up block (4).
- **E** Fit stays LM 4200-D (**9**) in accordance with the details given in the-Fitting Instructions H48.4200LS003en or H48.2200LS001en.

Frame

- A Position locking parts DS (1 and 8) DIN right or DIN left with run up block TBT (2) in accordance with details on Page 6 and lock with a grubscrew in each case (Torque 1.5 ± 0.25 Nm).
- **B** Insert pressure pieces (3) into locking parts DS (1 and 8) as shown on Page 6.

Note

If repeating an installation shoot bolt (5) with operating rod S6, slave sash gear (6) and operating rod S7 with shoot bolt (5) must be pushed in vertically on the locking side

Important notes


- Please consult our product information for tilt and turn fittings for windows and door height windows
- The information on profile sections is valid for the fittings described in these installation instructions.
 Please consult your SIEGENIA-AUBI representative if the dimensions of the windows are different.
- The hardware components described in this leaflet are made from non corroding material or have been galvanised to DIN 50 961. They must not be installed for use in aggressive, corrosion promoting air conditions
- We can accept no liability in respect of any damages or defects arising where the hardware assembly incorporates products not made by SIEGENIA.
- Install the hardware components correctly by following closely the instructions on this page.
- The surface treatment of windows and doors must be performed before the hardware is assembled on the window. Post treatment could adversely affect the effective functioning of the components, in which case we accept no liability for such consequence.
- Please follow the standard techniques for packing and wedge the sealed glazing units within the sash / frame.
- Do not use acid based sealing compounds because they may lead to corrosion of the hardware. Keep rebates free of dirt and debris - in particular cement and plaster. Keep hardware dry and avoid contact with cleaning agents.
- Keep all grooves and rebates free from dirt and debris especially residues of cement or plaster. Avoid the direct effect of moisture on the hardware and contact of the hardware with cleaning agents.

Liability exclusions

We accept no liability in respect of any damages or malfunctions caused by the hardware or the windows and French doors fitted with them, as a result of incorrect and inappropriate specifications or other information provided by the customer, failure to follow these instructions, wilful damage or negligence or misuse or alteration or repair of or an exertion of excessive force to the hardware by the user or customer.



VS LM-DS/A Sash dimensions

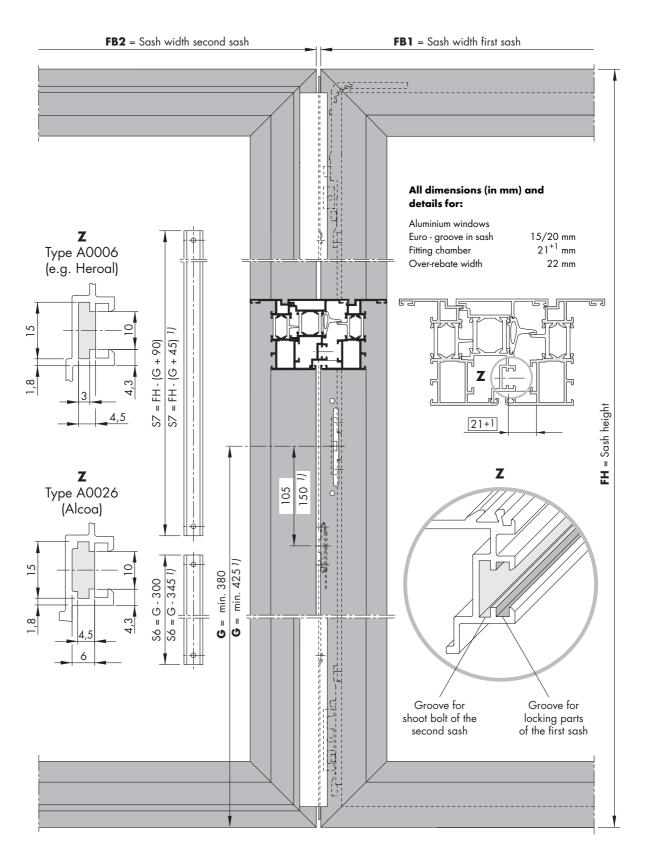

¹⁾ Only for routed in drive gear LM

VS LM-DS/A Frame dimensions

